



# USER MANUAL



# SV 111

## VIBRATION CALIBRATOR

Warsaw, 2022-04-21

Rev. 01.03

Copyright © 2022 SVANTEK.

All rights reserved.



**Note:** *Because of continuous product improvement SVANTEK reserves the right to make changes to product specifications without notice. To download the most up to date user's manual please visit our web site at [www.svantek.com](http://www.svantek.com). This user's manual presents the firmware revision named **1.16.x**.*

*The succeeding software revisions (marked with the higher numbers) can change the view of some displays presented in the text of the manual.*



**WEEE Notice:** *Do not throw the device away with the unsorted municipal waste at the end of its life. Instead, hand it in at an official collection point for recycling. By doing this you will help to preserve the environment.*

The software described in this manual is furnished under a license agreement and may be used only in accordance with the terms of that agreement.

### Copyright Notice

Copyright © 2022 Svantek Sp. z o.o.

All rights reserved.

Reproduction without permission is prohibited.

### Trademarks

Trademarks or registered marks in this manual belong to their respective manufacturers.

Microsoft and Windows are registered trademarks of Microsoft Corporation.

### Disclaimer

Information in this document is subject to change without notice and does not represent a commitment on the part of Svantek.

Svantek provides this document “as is”, without warranty of any kind, either expressed or implied, including, but not limited to, its particular purpose. Svantek reserves the right to make improvements and/or changes to this manual, or to the products and/or the programs described in this manual, at any time.

Information provided in this manual is intended to be accurate and reliable. However, Svantek assumes no responsibility for its use, or for any infringements on the rights of third parties that may result from its use.

This product might include unintentional technical or typographical errors. Changes are periodically made to the information herein to correct such errors, and these changes are incorporated into new editions of the publication.

### Technical Support Contact Information:

web: [www.svantek.com](http://www.svantek.com)

e-mail: [office@svantek.com.pl](mailto:office@svantek.com.pl)

## CONTENTS

1	General safety summary .....	4
2	Calibration .....	5
3	Accuracy of calibration .....	5
4	SV 111 model information.....	5
5	Unpacking and Inspecting the package contents .....	6
6	Optional accessories .....	7
7	SV 111 vibration calibrator .....	8
8	Control panel .....	9
9	Operating diagram .....	10
10	Submenu diagram .....	11
11	Calibration of the whole-body sensor .....	12
12	Calibration of the SV 105 Hand-Arm sensor .....	14
13	Calibration of the SV 3023M2 accelerometer .....	16
14	Calibration of the general-purpose accelerometer.....	17
15	Programming .....	18
16	General Care and Cleaning .....	20
17	Technical data .....	21
18	Declaration of Conformity .....	22
Appendix A	Recalibration.....	23
Appendix B	Defining calibration coefficient.....	26

## 1 General safety summary




Review the following safety precautions to avoid injury and prevent from damaging this product or other products connected with it. To avoid potential hazards, use this product only as specified. Qualified personnel should only perform the service procedures.



### Warnings, precautions and maintenance:

- Before using the calibrator be sure that the shaker shipping lock is detached. Starting the vibration calibrator with the shipping lock may destroy it.
- Use a proper AC/DC adapter, specified for this product and certified for the country of its use.
- Keep the product's surfaces clean and dry.
- Even when the device is not in use it is recommended to charge the battery once a month to keep it in good condition.
- It is recommended to carry out a technical inspection and recalibration of the device every 12 months to ensure accurate calibration level.
- Recalibration can be made by the calibration laboratory. If there is no possibility to recalibrate the device by calibration laboratory the device should be send to the manufacturer.
- All maintenance work and repairs can only be done by the personnel trained by the manufacturer.
- Handle with care.

### Safety terms and symbols:

Symbol	Symbol meaning
	Do not throw into standard municipal waste containers. The user is obliged to deliver used equipment to the manufacturer or to the recycling collection point.
	This product can be recycled
	This product has met EU consumer safety, health or environmental requirements

## 2 Calibration

One of the fundamental questions, that are most frequently asked while taking a measurement, is whether its result is accurate. Proceeding, with a measurement without having a positive answer to this question, may result in obtaining data of no practical use and wasting our time. However, we may easily obtain the answer by performing a calibration of the vibration level meter using a vibration calibrator. This device should be used before every set of measurements.

The vibration calibrator is a device, which produces the vibration of the defined levels and frequency. It allows to calibrate the vibration meter in comparative way.

Calibration procedure is also the best way for the complete measuring system (Meter, Cable and Transducer connected together) check. This is an essential action for the reliable measurements performed in the field!

## 3 Accuracy of calibration

Each measurement performed by any measurement device is burdened with an error. Result obtained from such measurement is only an estimate of the real value of the measured quantity. Hence, the purpose of calibration is to limit this inevitable error to a certain acceptable level. Maximum absolute value of the error of generated vibration signals is called the tolerance and is strictly defined by the standard ISO8041:2005.

## 4 SV 111 model information

The model SV 111 is a Portable Vibration Calibrator. It is designed to check/calibrate various types of vibration level meters according to the ISO 8041-1:2017.

Three standard frequencies 15.92 Hz, 79.58 and 159.2 Hz (plus one more extra 636,6Hz) combined with high loading mass brings opportunity to calibrate almost any existing transducer.

Because of its dedicated adapters, SV 111 allows to take measurements in three directions. So, to calibrate effectively tri-axial transducers!

Because of its own internal rechargeable battery, it is a truly mobile and flexible device designed to use either in a laboratory or during fieldwork.

The unique feature of SV 111 is capability to calibrate complete "seat accelerometer", without necessity to extract accelerometer from the rubber cushion!

The robust case allows placing the calibrator directly on the ground, what is extremely useful in the field applications. Built in electronic levelling system helps with correct positioning of the device for correct vibration calibration. Levelling of the SV 111 is important for keeping transversal vibrations levels within tolerances specified by the ISO 8041-1:2017.

## 5 Unpacking and Inspecting the package contents

Despite careful packing, the risk of the device damage cannot be entirely eliminated. Upon delivery, please make sure that the device is not damaged and verify that you received the ordered equipment and optional accessories (if ordered). In case of any problems, please contact an authorized Svantek representative, the service staff or the manufacturer directly. The complete set includes the following items:

- SV 111 Vibration calibrator
- SA 33 AC/DC adapter



### Before using the device:

- Be sure that the shaker shipping lock is detached. Starting the vibration calibrator with the shipping lock may destroy it.

To detach the shaker shipping lock, unscrew four bolts with the hex wrench and two screwdriver tips attached to the magnet. Screw the central bolt into the loose sleeve.



Don't throw away the transport lock with three bolts because it is necessary to secure the shaker during transportation.

- Charge SV 111 to the full. In order to charge the battery, connect SA33 AC/DC adapter plug to SV 111 EXT\_DC supply socket and then connect it to the mains.

The SA33 AC/DC adapter is placed in the charger slot.



- If the device has been kept or transported in low temperature (below 0 °C), it is recommended to leave it for a few hours in the room temperature before connecting it to the power supply. If any steam condensation appears, it is recommended not to connect the device to the mains electricity for 4 to 8 hours until the exterior surface is dry.

## 6 Optional accessories

The SV 111 calibrator set doesn't include the SA 105 adapter used for calibration of the SV 105B hand-arm transducers and the SA 44 adapter for calibration of the SV 3023M2 transducers. These adapters are optional and should be ordered separately.


## 7 SV 111 vibration calibrator



### SV 111 vibration calibrator

- 1.Magnet with two screwdriver tips; 2.Adapter; 3.Hex wrench slot with support sleeves; 4.Charger slot; 5.Shaker; 6.Transportation lock; 7.Support; 8.Fastening screw; 9.Display; 10.Keyboard; 11.EXT\_DC supply socket; 12.USB port;


## 8 Control panel

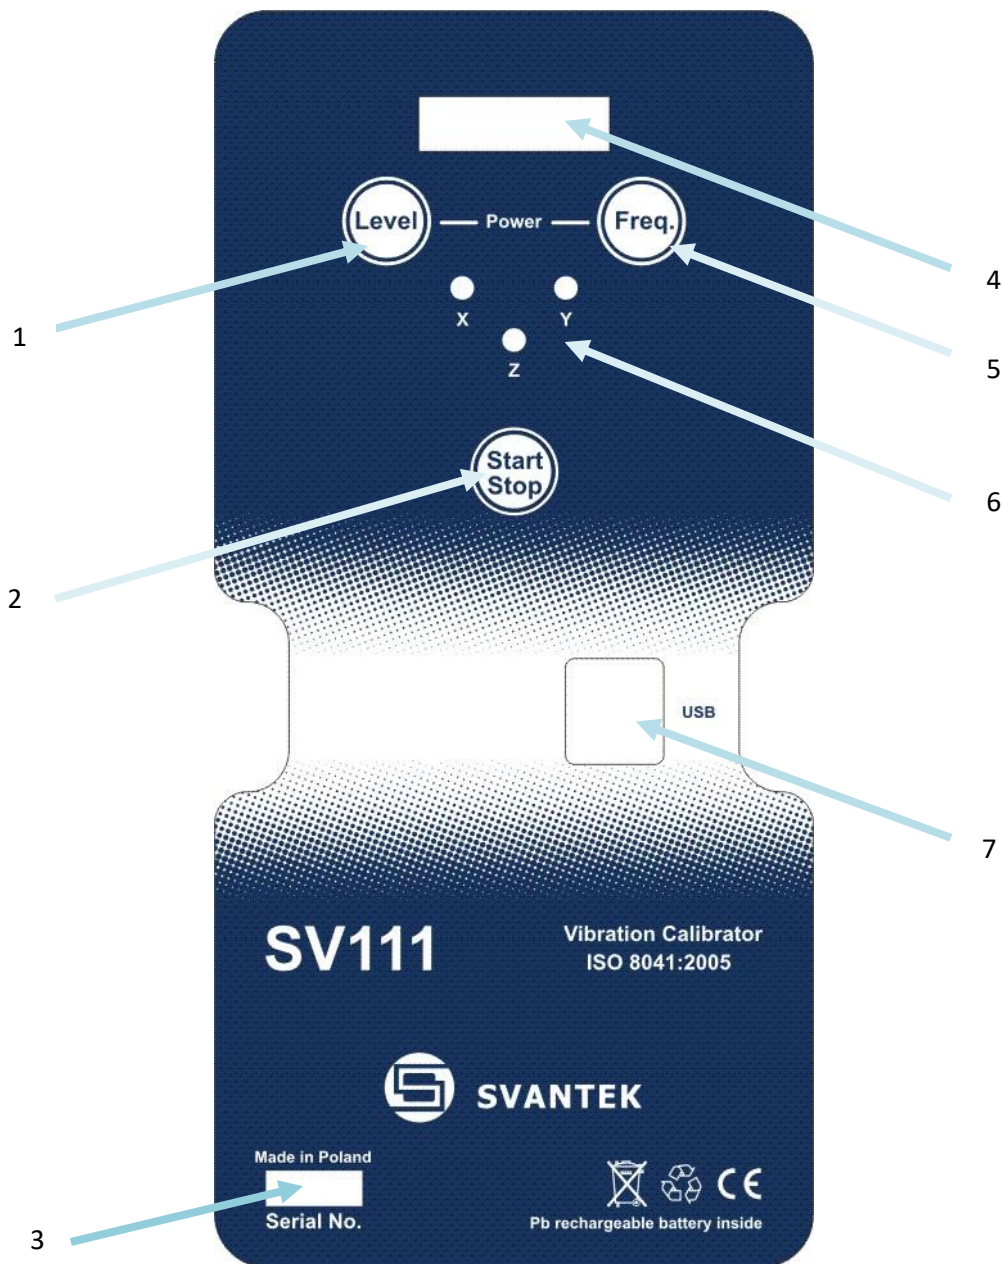

### SV 111 control panel


1.Vibrations level button/Power on button A; 2.Start/Stop button; 3.Serial number box; 4.Display box; 5.Vibration frequency button/Power button B; 6. Spirit level; 7.USB port

## 9 Operating diagram

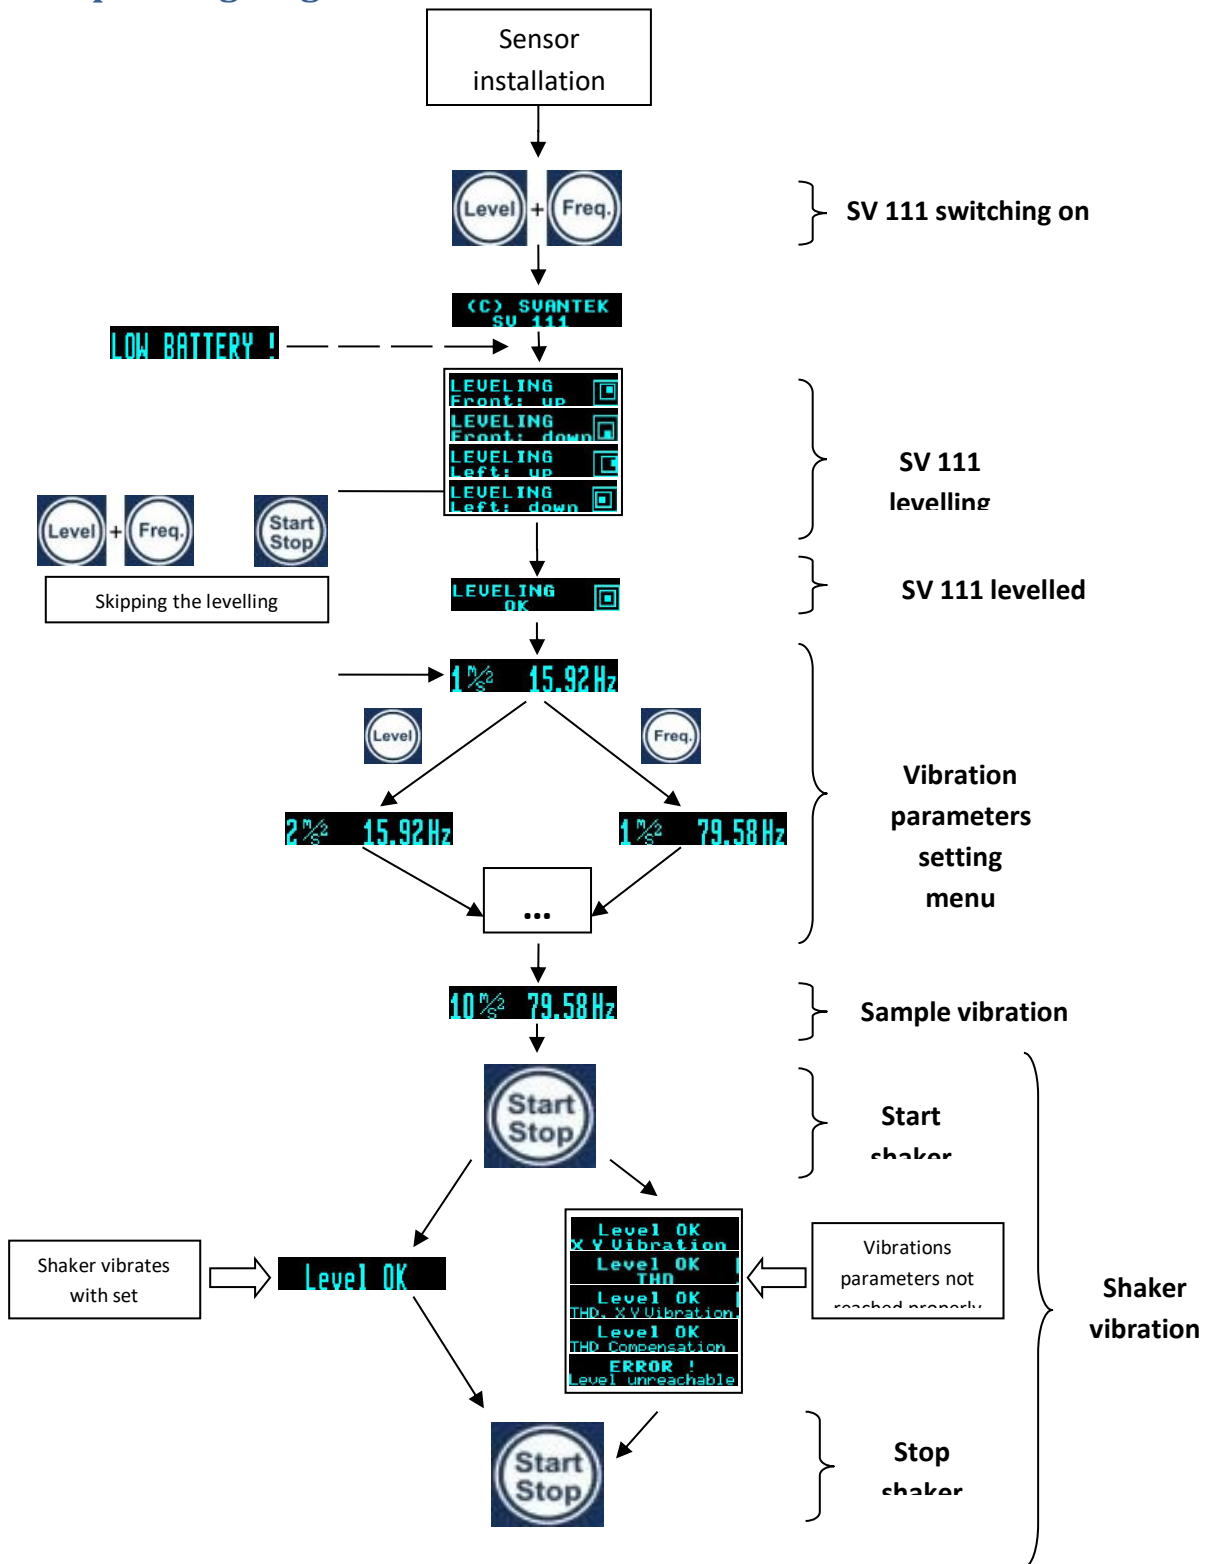

## 10 Submenu diagram

- Program submenu can be reached from “Vibrations parameters setting menu” by pressing

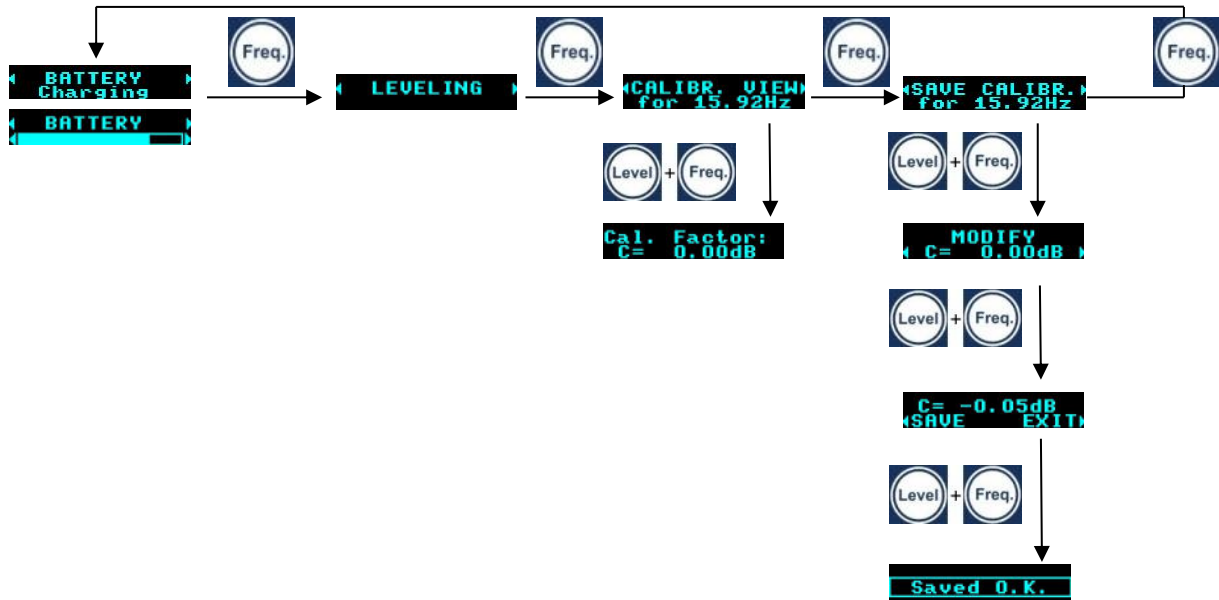

- To return to “Vibrations parameters setting menu” press




## 11 Calibration of the whole-body sensor



The whole-body sensor should be tested/calibrated at 15.92 Hz only!

- dismantle the adapter from the case cover and screw it to the shaker with one or more bolts (one central bolt should be sufficient for the system check)

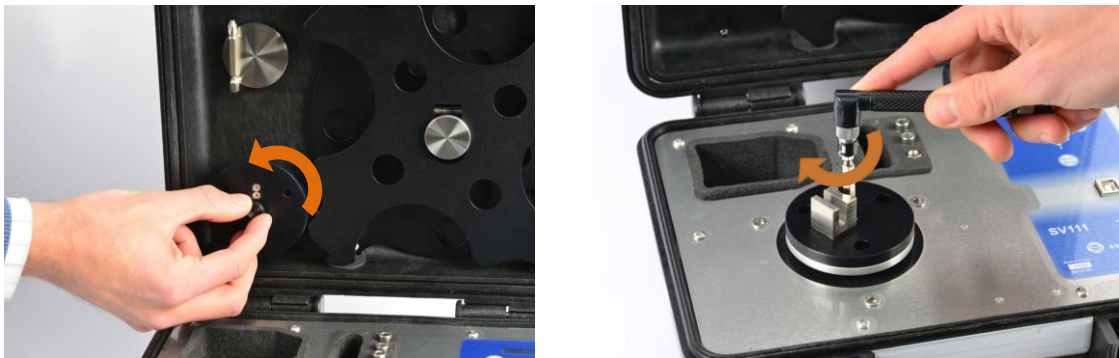

- dismantle the support system from the case holder, put it on the adapter and tight the fixing bolt:



- unscrew the central screw of the whole-body sensor and install the sensor on the support system screwing them altogether:



- position the sensor according to the calibrated axis (channel) and tight the fixing bolt:



- put the support system with the tested sensor in the horizontal position on the adapter and tight the fixing bolt:



## 12 Calibration of the SV 105 Hand-Arm sensor




The SV 105 Hand-Arm sensors should be calibrated at 79,58 Hz only.



The description of calibration of SV 105 Hand-Arm sensors is given based on its **SV 105D** modification with the use of the **SA 105D** dedicated adapter. This adapter is compatible with all previous modifications of SV 105. At the same time all previous modifications of SV 105 can be calibrated with the use of their dedicated adapters and the calibration description presented in the previous SV 111 User manuals.

To perform calibration of the SV 105D Hand-Arm sensor, use the **SA 150C** belt with the greatest curvature.

- Screw the SA 150C belt to the SV 105D sensor with the special screw from the SV 105D kit using for that a special 1.5mm Allen screwdriver (both included in the SV 105D kit). If the belt was screwed to the sensor with the normal screw it is necessary to unscrew it and screw again with the SA 105D screw.

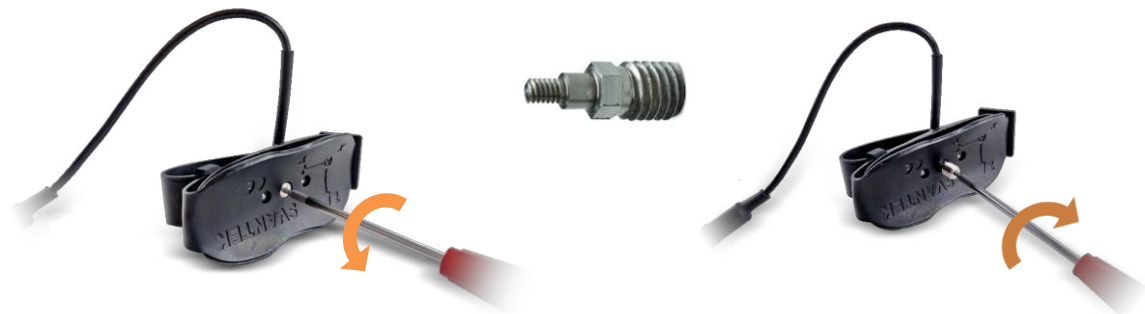

- Apply the twisted sensor and belt to the SA 105D adapter (SV 105D must be positioned so that the cable is facing the adapter side without thread hole). The adapter has a nut that will tighten the SV 105D sensor to the SA 105D adapter when twisted. In order for the belt not to dangle, it should be positioned as shown in the photo below.



- Install the calibration adapter with the vibration sensor to the calibrator's shaker using special stud (included in the SV 105 kit):



Positioning of the adapter with the sensor for calibration of the X-axis, Y-axis and Z-axis should be as per photos below. For this use the appropriate hole in the adapter for the stud.





### 13 Calibration of the SV 3023M2 accelerometer

The SV 3023M2 accelerometer is mounted on the shaker with special adapter (SA 44). The SA 44 adapter set includes two studs M5/M5 and M5/M3. The M5/M3 stud is used for fixing the accelerometer to the adapter. Another M5/M5 stud is used for fixing adapter with the accelerometer to the shaker.



The SA 44 adapter allows to calibrate the SV 3023M2 accelerometer in all directions.

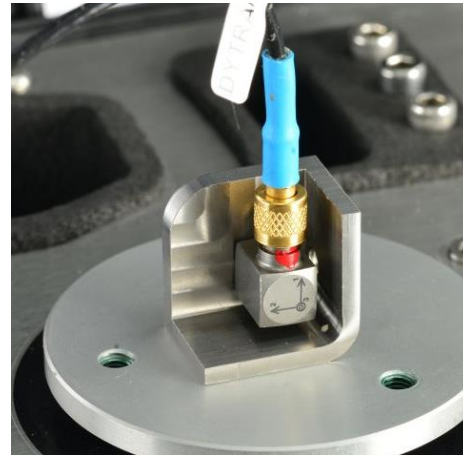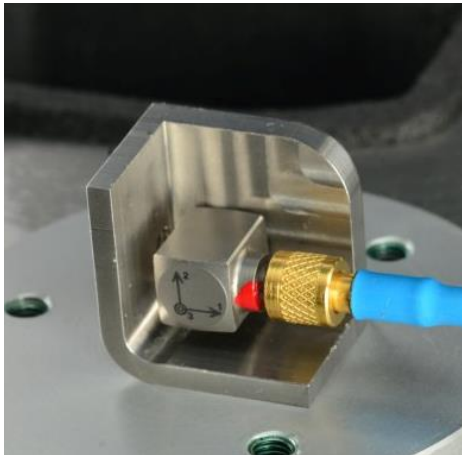


## 14 Calibration of the general-purpose accelerometer

The general-purpose accelerometer (for example, SV 80) is mounted directly on the shaker with special stud, normally included in the accelerometer set.



## 15 Programming

- Switch on power by pressing two buttons at the same time for a while
- The device type information will be displayed
- When the battery level is low, 'LOW BATTERY' is displayed every 30 sec.
- Level the device according to the spirit level information.
  - Move front side up
  - Move front side down
  - Move left side up
  - Move left side down
- When the level is reached the information 'levelling ok' is projected on the display for 5 seconds, then automatically switches to vibrations parameters setting menu



It is possible to skip leveling process, but it is strongly recommended to proceed the leveling process before every calibration.



Spirit level can be launched anytime using the program submenu.

- After leveling, the device displays the default vibrations parameters values
- You can change values by pressing the 'Freq.' button in the following order: 15,92; 79,58; 159,2; 636,6 Hz
- Depending on settled frequency value, vibration level can be set according the table bellow




Frequency	15,92	79,58	159,2 Hz	636,6	Hz
Level	1,2	1; 2; 3; 4; 5; 6; 7; 8; 9; 10	1; 2; 3; 4; 5; 6; 7; 8; 9; 10	1	$\frac{m}{s^2}$


- When vibration parameters are set, run the shaker by pressing 'Start/Stop' button.



During levelling of the calibrator, the diodes are blinking yellow (orange)

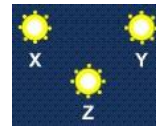

- When the vibrations are steady, the diodes are lighting with continuous green light and the information 'Level OK' is projected on the display

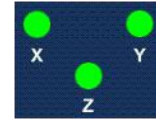

+

Level OK

- In special cases described below some diodes may have red lights. The explanation of red diodes is displayed on the screen.



**THD** (Total harmonic distortion) – means that the harmonics on Z axis exceed threshold 5% (-26 dB) of reference vibration level.

For example: When the vibrations are set with  $\approx 16$  Hz,  $1 \text{ m/s}^2$  (120 dB), then the total vibrations amount with frequencies  $n \cdot 16$  HZ (32, 48, 64, 80,...) cannot be higher than  $0,95 \text{ m/s}^2$  (94 dB)

SV 111 is compensating harmonic distortion

Level OK  
THD



Level OK  
THD Compensation



**X Y Vibration** means that vibrations' level in X or Y (corresponding diode is lighting red) direction are higher than 10% (-20dB) of vibrations level generated in Z direction

Level OK  
X Y Vibration



This means that both kinds of mistakes were made at the same time.

Level OK  
THD, X Y Vibration



The device cannot reach set parameters, and the device stops generating the vibrations

ERROR !  
Level unreachable

- While the shaker is working, set parameters can be checked by pressing either the 'Level' or 'Freq.' button: Set parameters will be displayed by 5 seconds



- To stop the shaker, press the 'Start/Stop' button



- Switch off by pressing two power buttons at the same time for a while



## 16 General Care and Cleaning

- Remove the sensor and switch the device off
- Disconnect the device from the power supply.
- Wipe the device's surface with the cloth damped with the mixture of warm water and detergent.
- After cleaning, wipe the device with dry cloth and wait until the surface is completely dry.
- Do not immerse the device in any fluids as this may damage the device and cause electrical shock. Only the external parts of the device should be cleaned

## 17 Technical data

<b>Calibration signal parameters</b>					
<b>Frequency</b>	15,92	79,58	159,2 Hz	636,6	<b>Hz</b>
<b>Vibration accelerations (RMS)</b>	1	1; 2; 3; 4; 5; 6; 7; 8; 9; 10	1; 2; 3; 4; 5; 6; 7; 8; 9; 10	1	<b><math>\frac{m}{s^2}</math></b>
<b>Vibration velocities (rms)</b>	10	2, 4, 6, 8 10, 12, 14, 16, 18 20	1, 2, 3, 4, 5, 6, 7, 8, 9, 10	0.25	<b><math>\frac{mm}{s}</math></b>
<b>Vibration displacement (rms)</b>	100	4, 8, 12, 16, 20, 24, 28, 32, 36, 40	1, 2, 3, 4, 5, 6, 7, 8, 9, 10	0.0625	<b><math>\mu m</math></b>
<b>Amplitude error</b>	Less than $\pm 3\%$				
<b>Frequency error</b>	Less than $\pm 0,05\%$				
<b>Transverse vibration</b>	Less than 10% of main direction				
<b>Harmonic distortion</b>	<5	<3	<3	<3%	<b>%</b>
<b>General</b>					
<b>Maximum weight of tested object</b>	1000	300	200	200	<b>g</b>
<b>Sensor mounting</b>	Threaded hole M5 x 12 mm; Seat adapter for SV 100, SV 38, SV 38V Mounting disc for attaching with Beeswax or SA 38 adapter				
<b>Levelling off time</b>	Typically 15 ÷ 20 seconds, 60 seconds max				
<b>Working conditions</b>					
<b>Temperature range</b>	-10°C ÷ 50°C				
<b>Humidity range</b>	25% ÷ 85%				
<b>Power supply</b>					
<b>Battery type</b>	Rechargeable 6V/12Ah				
<b>Continuous operating time</b>	Up to 20 hours				
<b>Automatic switch off</b>	From 5 to 60 minutes adjustable				
<b>Charging time</b>	Less than 10hours				
<b>Power supply for charger</b>	15 W; 8÷24 V				
<b>Overall weight and dimensions</b>					
<b>Weight</b>	6,5 kg (incl. battery)				
<b>Dimensions</b>	395 x 270 x 194 mm				

## 18 Declaration of Conformity


**SVANTEK**

 INSTRUMENTATION FOR SOUND & VIBRATION  
 MEASUREMENTS AND ANALYSIS


### CE Declaration of Conformity

No. SV111-CE-EN/06/2019

 Manufacturer: **SVANTEK Sp. z o. o**

 Address: Strzyglowska 81  
 04-872 Warszawa  
 Poland

Kind of product: VIBRATION CALIBRATOR

 Type: **SV 111**

 Directive: **Electromagnetic Compatibility Directive (EMC) 2014/30/WE**

 Standards: EN 61326-1:2013 Measurement equipment: EMC emission and immunity  
 EN 55011:2016 Radio-frequency disturbance characteristics - Limits and methods of measurement

**Auxiliary industry standards:**

ISO 8041-1:2017 Human response to vibration -- Measuring instrumentation -- Part 1: General purpose vibration meters

I, the undersigned, representing the manufacturer, declare in sole responsibility, that the product specified above, to which this declaration relates, conforms to the above mentioned Directives and Standards:

 Place of issue: **Warsaw, Poland**

Date of issue:

*4 06 2019*
**Wiesław Barwicz, General Manager**
  
 (signature)

SVANTEK Sp. z o. o.

[www.svantek.com](http://www.svantek.com)

 e-mail: [office@svantek.com.pl](mailto:office@svantek.com.pl)

Headquarters:

Strzyglowska 81, 04-872 Warsaw, Poland

tel./fax: +48 22 51 88 320; +48 22 51 88 312

VAT EU PL5270105272

REGON 002175672

KRS 000192065

Registered in the Warsaw District Court, XII Economic Department

Initial Capital 100 000 PLN

## Appendix A                      Recalibration



Recalibrations have to be done for all frequencies with vibration level set as shown in the table below:


Frequency	Vibration level
15.92 Hz	1m/s <sup>2</sup>
79.58 Hz	10m/s <sup>2</sup>
159.2 Hz	10m/s <sup>2</sup>
636.6 Hz	1m/s <sup>2</sup>

Recalibration for frequency 15.92 Hz:

- Install the reference sensor and start the shaker with 15.92 Hz and 1m/s<sup>2</sup> vibrations parameters.



- Wait until the vibrations are steady (diodes are lighting with green continuous light and information "Level OK" is displayed).

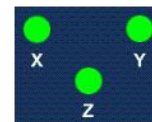

+



- Read the vibrations level value from the reference sensor. When it is the same as the set one skip to the next frequency. When it differs it is necessary to enter/modify the calibration coefficient.
- Stop the shaker by pressing the 'Start/Stop' button



- When the device is idle press the 'Level' and 'Freq.' buttons at the same time to enter the submenu.



- First position displayed in submenu will be the battery current status



- The submenu positions can be changed by pressing either the 'Level' or 'Freq.' button



Further submenu positions displayed are:

- Leveling
- Calibration coefficient that was previously entered
- Position where the new calibration coefficient can be set




- Checking currently entered calibration coefficient:

- when the 'CALIBR. VIEW' is displayed
- press the 'Level' and 'Freq.' buttons at the same time



- Currently entered value will be displayed on the screen



- Changing the calibration coefficient

- When a notice <SAVE CALIBR.> is displayed
- Press the 'Level' and 'Freq.' buttons at the same time



- Then modification screen will be displayed.

MODIFY  
← C= 0.00dB →

- To decrease currently displayed value by 0,05 dB, press the 'Level' button



- To increase the currently displayed value by 0,05 dB, press the 'Freq.' button



- Currently set value will be displayed on the screen.

MODIFY  
← C= -0.05dB →

- To confirm the set value, press the 'Level' and 'Freq.' at the same time.



- To save the set value, press 'Level'
- To exit without saving, press 'Freq.'

C= -0.05dB  
←SAVE EXIT→



- After saving confirming screen will be displayed

Saved O.K.



As the calibration coefficient is set, it is recommended to repeat the measurement with reference sensor.

## Appendix B Defining calibration coefficient

Use one of formulas bellow:

- $C = 20 \log_{10} \frac{A}{A_0}$  [dB]

Where:

A – reference sensor vibration level

$A_0$  – selected vibration level of the calibrator

- $C = A_r - A_c,$

Where:

$A_c$ - selected vibration level of the calibrator [dB]

$A_r$  – reference sensor vibration level [dB].